

Bowflag® Construction Sheet



- ✦ Remove all components from the carrying case and examine to make sure all pieces are included and are not damaged.
- ✦ There are different pole components in each carrying case depending on the Bowflag® size or shape.




- ✦ Lay pole components out on the floor in a row, starting with the largest.
- ✦ Assemble pole components by placing the thinner component into the thicker component.



- ✦ Mount Bowflag® to pole by inserting the tip of the pole into the sleeve and working the flag down the pole.
- ✦ Note: Be certain the tip of the pole is fully inserted into the strengthened end of the sleeve.

IF THIS IS NOT DONE CORRECTLY, FAILURE OF FLAG WILL RESULT AND ALL WARRANTIES WILL BE VOID!

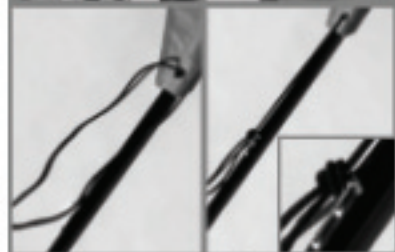

- ✦ Place elastic cord through the flag grommet and fasten it to the bottom pole segment.
- ✦ Pull the elastic cord taut to adjust the tension and tie a knot in the cord.
- ✦ Mount the Bowflag® using the available base.



✦ **Ground Sleeve with bearing:**

Do not hammer on the top of the swivel! This will damage the bearing. Instead, hammer on top of the main part of the steel rod to install the ground sleeve.

✦ **Ground Sleeve without bearing:**

Hammer on top of the main part of the steel rod to install the ground sleeve. Always use gloves and safety glasses and exercise caution when using tools.

IF THIS IS NOT DONE CORRECTLY, FAILURE OF GROUND SLEEVES WILL RESULT AND ALL WARRANTIES WILL BE VOID!

Treatment, Washing, Drying, Ironing

The Bowflag® must wave freely so that it does not come into contact with trees, wires, poles or buildings. Take your Bowflag® down during inclement weather or high winds.

The Bowflag® is made from branded polyester and can be washed in all household washing machines at 140°F (60°C) with the addition of washing machine detergent. Before washing it is advisable to remove all items that could cause damage. After washing, the Bowflag® should be rinsed thoroughly.

For drying, the washed Bowflag® is best hung to dry or hoisted wet on the pole.

The ironing and steaming of the Bowflag® for outdoor use is not necessary. Product for indoor use can be ironed or steamed. Do not dry clean your Bowflag®.



Do not fly your Bowflag® in extreme winds (24-31mph or 6bft and higher) and/or thunderstorms. Do not use near overhead wires. If this is not done correctly, it may result in injury or death and all warranties will be void.

