

# Bowflag® Assembly


## ASSEMBLY HARDWARE




NOTE - THE AMOUNT OF POLES ARE DETERMINED BY THE SIZE OF THE BOWFLAG®

### Wind Speed Recommendations:

Bowflag® 25-30mph (6bft)

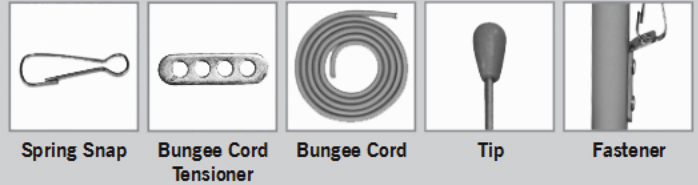

## ASSEMBLY

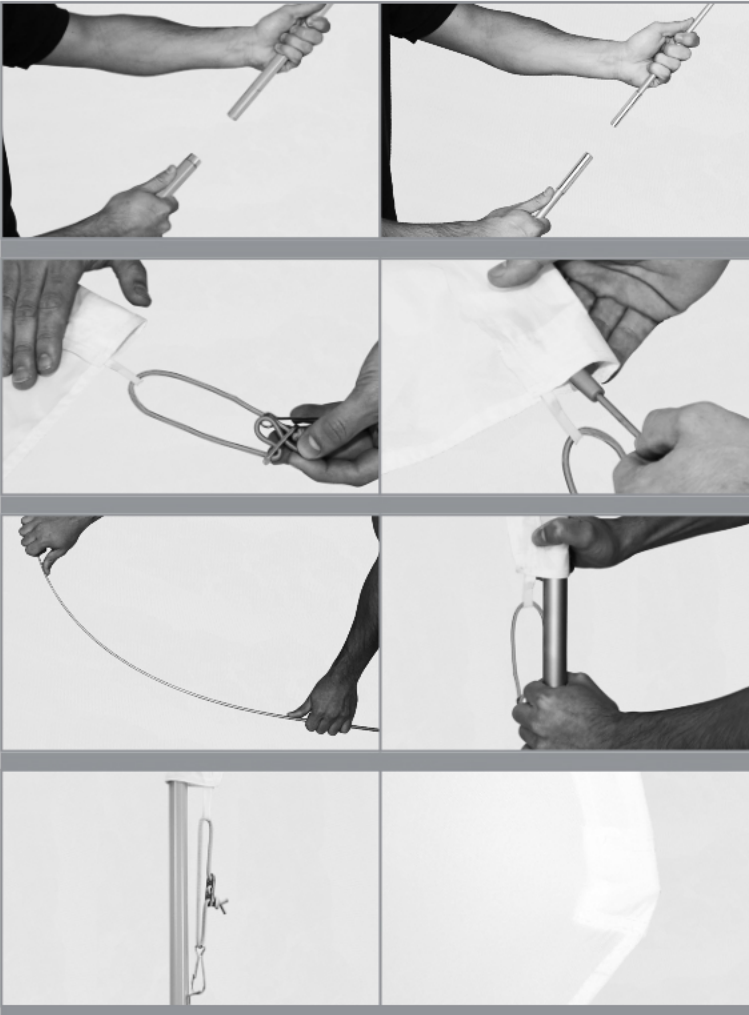

1. Assemble the pole set. The poles will be assembled from largest diameter pole on the bottom to the smallest diameter pole at the top. There is only one correct order the poles can be assembled. For reference the top pole is a flexible fiberglass pole with a tip and the bottom pole will have an attached fastener.

2. Remove one end of the bungee cord from the tensioner and place it through the tab on the print. After going through the tab, feed the bungee cord through the spring snap before reattaching it to the tensioner.

3. Insert assembled pole set into the print pole sleeve.

4. The flexible fiberglass pole will curve to the shape when the flag is fully taut. Pull the print and the pole sleeve downwards towards the fastener located on the bottom pole.

5. Attach spring snap to the fastener and mount the whole assembly using one of the available bases. Make sure the tip of the flexible fiberglass pole is fully inserted into the reinforced pole tip. Adjust the bungee cord and tensioner so print is fully taut when the spring snap is attached to the fastener.

## Important Bowflag® Maintenance & Cleaning Information:

- The Bowflag® must move freely so that it does not come into contact with trees, wires, poles or buildings. Take your Bowflag® down during inclement weather or high winds.
- The Bowflag® is made from branded polyester and can be washed in all household washing machines at 140°F (60°C), with the addition of washing machine detergent. Before washing, it is advisable to remove all items that could cause damage. After washing, the Bowflag® should be rinsed thoroughly.
- For drying the Bowflag®, it is best hung to dry or hoisted wet on the pole to air dry.
- The ironing and steaming of the Bowflag® for outdoor use is not necessary. Product for indoor use can be ironed or steamed. Do not dry clean your Bowflag®.

The Bowflag® has been wind tunnel tested in order to provide our customers with the most durable flag system, even when using double-sided flags. Do not fly your Bowflag® in extreme winds (any wind speed exceeding what is listed above) and/or thunderstorms. Do not use near overhead wires. User must read and observe construction sheet. If this is not done correctly it may result in damage to the unit, injury, or death, and all warranties will be void.

