


Installation Instructions and Materials Required for Installation

Materials Required

1. Telescoping flagpole
PVC sleeve (included with pole)
2. Three 60lb. bags of concrete
mix (approx.)
3. Measuring tape or yard
stick
4. Contractors level
5. Small rock or coarse gravel
container for mixing concrete

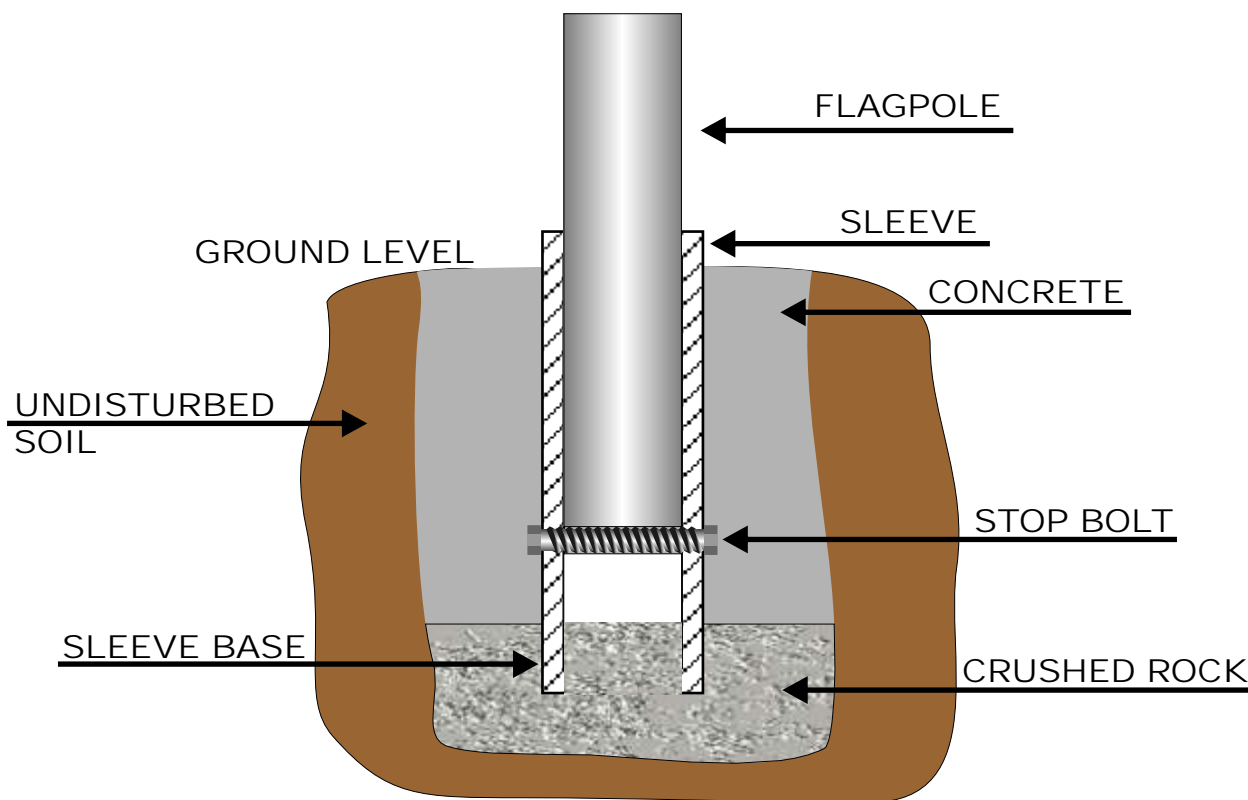

NOT TO SCALE

Dig a hole 28" deep by 12" round and place 6" of small gravel for drainage on the bottom of the hole. Insert bolt in sleeve, place sleeve in hole. Surround sleeve with cement, place level on top of the sleeve to see that it is level. Set and cure overnight.